

VRF Cassette Indoor Unit Instruction Manual



 


 
 

 
 






Contents

1 Safety precautionary measures	1
2 Selection of Installation Site	2
3 Installation of indoor unit	3
4 Drain pipe layout	11
5 Install connecting pipes and electronic throttle	13
6 Connection of Electricity	16
7 Fault code table	18

Accessories and parts purchased locally

 Accessories

Name of accessories	Numbers	Shape	Application
Installation instruction for indoor unit	1	The manual	(Please be sure to hand it to user.)
Insulating tube	2		To encase single joints of high and low pressure pipes.
Large-sized heat insulating mattress	1		Heat insulation
Ribbon	10		Bind up cables and connecting pipes.
Dome insulated tip	6		Used to connect wires
X-type insulated tip	3		Used to connect wires
Brass joint nut	1		Used to connect pipe
Remote controller	1		Control A/C
Battery	2		Supply power to remote controller
Connecting pipe of electronic expansion valve	1		Connect electronic expansion valve and liquid side of indoor unit (Different models may have different sizes and calibers. Please install according to the real products.)
Screw configuration	4		Used to hang the air conditioner
Hoop	2		Used to fasten drainpipe
Drain pipe	1		Used to drain water
Expandable screw	4		Used to hang the air conditioner
Blank valve bag	4		Used to contain accessories.

Accessories and parts purchased locally

Parts Purchased Locally

	Type	2.2kW~2.8kW	3.2kW~5.6kW	7.1kW~8.0kW	9.0kW~16.0kW
Cooper pipe	Liquid pipe (mm)	Φ 6.35 × 0.8		Φ 9.52 × 0.8	
	Gas pipe (mm)	Φ 9.52 × 0.8	Φ 12.7 × 0.8	Φ 15.88 × 1.0	
PVC drainpipe	For the indoor unit drainpipe. The length is decided according to the actual need.				
Insulation bushing	Assort inner diameter respectively with relevant copper pipe and hard polyethylene plastic pipe. The thickness is usually 10 mm (above). It should be appropriately thickened in closed and wet areas.				

Correct Disposal of this product



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

1. Safety Precautionary Measures

Warning

- The installation work must be done by the distributor or a professional worker.
The installation worker must be equipped with all related knowledge as a wrong operation may cause fire risk, electric shock, injury or water leakage, etc.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Parts purchased locally should be appointed products of our company.
Retailed parts like humidifier should be appointed products of our company, the violation of which may cause fire, electric shock or water leakage, etc. The installation work of retail products must be installed by professionals.
- If the unit has to be installed in a small room, suitable measures shall be done to make sure any refrigerant leakage concentration if happened in the room will not exceed the critical level.
For detailed measures, please consult with the distributor.
- Connection of power supply must be complying with rules specified by the local electrical authority.
Required by law, must be reliable ground works. If the ground is not perfect, it may result in electric shock
The appliances that are intended to be permanently connected to fixed wiring, and have a leakage current that may exceed 10mA, shall state that the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable.
- If the air conditioner need to be moved or reinstalled, please let the distributor or a professional worker operate.
Incorrect installation will cause fire risk, electric shock, injury or water leakage, etc.
- The user is not permitted to rebuild or repair the unit by themselves.
Incorrect repairing will cause fire risk, electric shock, injury or water leakage, etc, so repairing must be performed by the distributor or a professional worker.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Notice

- Make sure the water drainage pipe is useable.
Incorrect installation of water drainage pipe will cause water leakage and furniture wetting, etc.
- Make sure a current leakage protection switch is equipped.
The current leakage protection switch must be equipped or there may be an electric shock.
- It mustn't be installed in any position with potential leakage of inflammable gas.
If any inflammable gas leaks, there may be a fire risk around the indoor unit.
- Make sure the foundation installation or suspending installation is firm and reliable.
If the foundation or suspension is not firm and reliable enough, there may be a fall accident.
- Make sure all electric cables are correctly connected.
If any electric cable is incorrectly connected, any electrical part may be damaged.
- Exposure of this machine to water or other moisture before installation will cause short-circuit of electrical components.
Don't store it in humid basement or expose it to rain or water.
- If the refrigerant leaks during installation, the room must be ventilated at once.
The leaked refrigerant may generate some toxic gas if it contacts any flame.
- After installation, make sure there is no refrigerant leakage.
If the refrigerant gas enters and contacts some flame source such as a heater, a stove or an electric cooker, it may generate some toxic gas.


2. Selection of Installation Site

2-1 Selection of Installation Site for Indoor Unit

- 1) Provide enough space for installation and maintenance.
- 2) The ceiling is horizontal and the building construction can support indoor unit.
- 3) Ventilation is accessible and the site suffers from the minimal impact of extraneous air.
- 4) Air stream can spread to everywhere of the room.
- 5) Connecting pipe and drainpipe are easy to be extracted.
- 6) No direct radiation of heat.
- 7) If the temperature and humidity of the ceiling exceeds respectively 30 °C and RH80%, please stick insulating material on the body of the air conditioner. Please use glass wool or expanded polyethylene etc., which is more than 10 mm thick. (If it is more than 10 mm, please collect it in the opening of the ceiling.)

2-2 Space Needed for Installation

As to space needed for installation of ceiling-style indoor unit, please refer to the following figure.

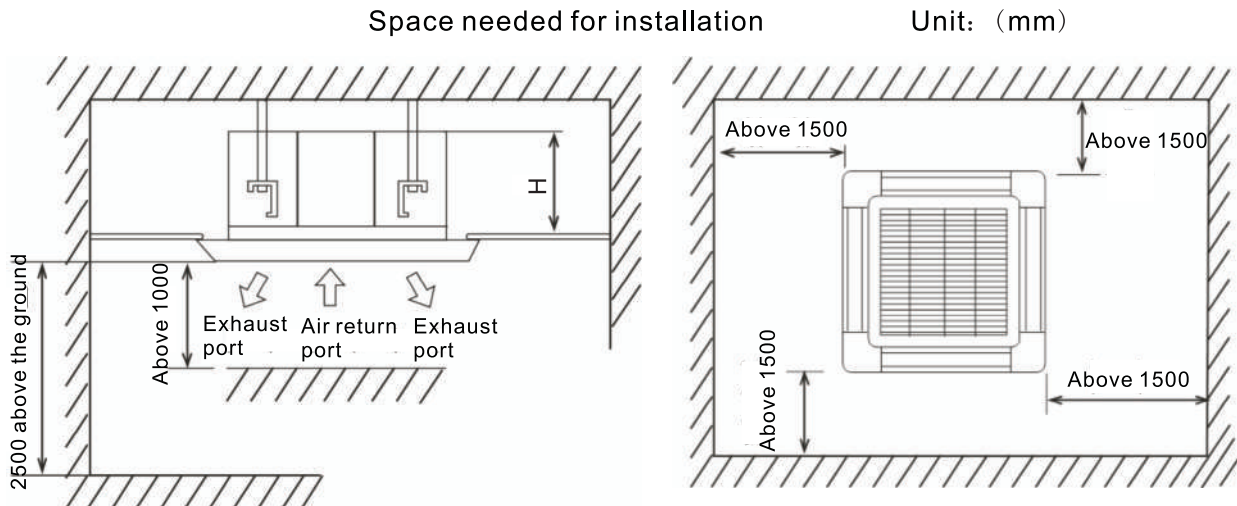

Model	Tap sizes (H)
2. 2kW~4. 5kW	267
5. 6kW~8. 0kW	232
9. 0kW~16. 0kW	286

Notes: Actual sizes are subject to real products.


3. Installation of Indoor Unit

⚠ Warning

- The air conditioner must be installed in a place of enough strength to support the machine weight.
- If it lacks of strength, the machine may fall down and cause some personal injury.
- If it lacks of strength, the machine may fall down and cause some personal injury.
- Incorrect installation may cause some accident because of machine falling down.

3-1 Preparation before Installation

3-1-1 For the position relation between ceiling opening and unit as well as hanging screw bolt, please refer to the following figure

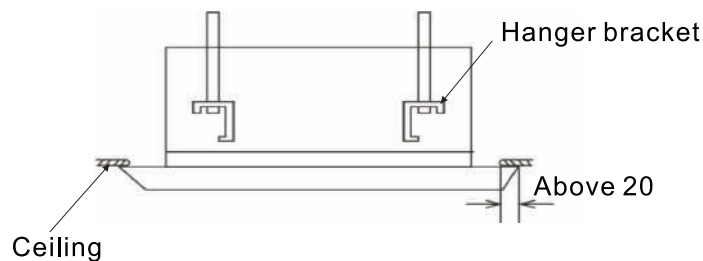


Instruction:

- 1) The overlap section of the ceiling and decorative panels should be over 20 mm. If necessary, strike out openings needed for installation on the ceiling (for existent ceiling).
- 2) As for the size of the opening on the ceiling, please refer to installation drawing.
- 3) Before installation, accomplish all pipes (refrigerator pipe, drain pipe) and wires (indoor and outdoor unit cables) connected with the indoor unit, so that they can be connected immediately with the indoor unit after installation.
- 4) Strike out openings which are possibly needed to reinforce the ceiling frame on the ceiling so as to ensure a level ceiling and prevent the ceiling from vibrating. For details, please consult builders.

3-1-2 Installation of hanging screw rod

To support the unit, if there is a ceiling, use sill anchors; if it is a new ceiling, use buried anchors, embedded anchors or other parts provided on the spot. Before continuing the installation, adjust the distance between it and the ceiling.

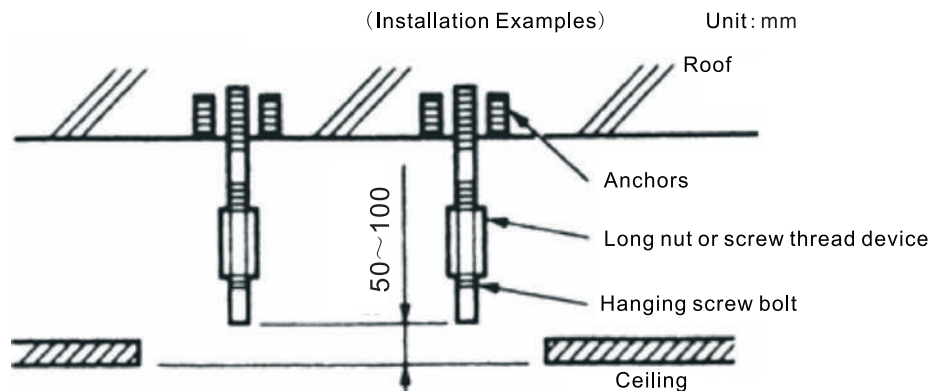

3. Installation of Indoor Unit

3-2 Installation of Indoor Unit

A. No installation position on the ceiling

① Attach the hanger bracket on hanging screw bolts. Be sure to respectively use nuts and washers on both ends of the hanger bracket so as to ensure that the hanger bracket is fixed firmly. Strongback 7 may prevent the washer from dropping.

② For the size of the opening on the ceiling, please refer to the following Installation Board 5. For details, please consult builders or carpenters.

③ Adjust the unit to a correct installation position.

④ Check if the unit is horizontal or not.

Indoor unit is furnished with built-in draining and floating switch. Check if the 4 angles of the unit are level with leveling instrument or water-filled polyethylene pipe. (If the opposite direction of water condensation leans, floating switch may not work, which will cause dripping.)

⑤ Remove Strongback 7 which is used to prevent waterproof washer from dropping and screw the nuts on it.


⑥ Remove installation boards.

B. With installation position on the ceiling

① Temporarily install indoor unit and attach the hanger bracket on hanging screw bolt. Be sure to respectively use nuts and washers on both ends of the hanger bracket so that the hanger bracket is fixed firmly. Strongback 7 may prevent the washer from dropping.

② Adjust the height and position of the unit.

③ Carry out procedures ④ and ⑤ of "1) No installation position on the ceiling".

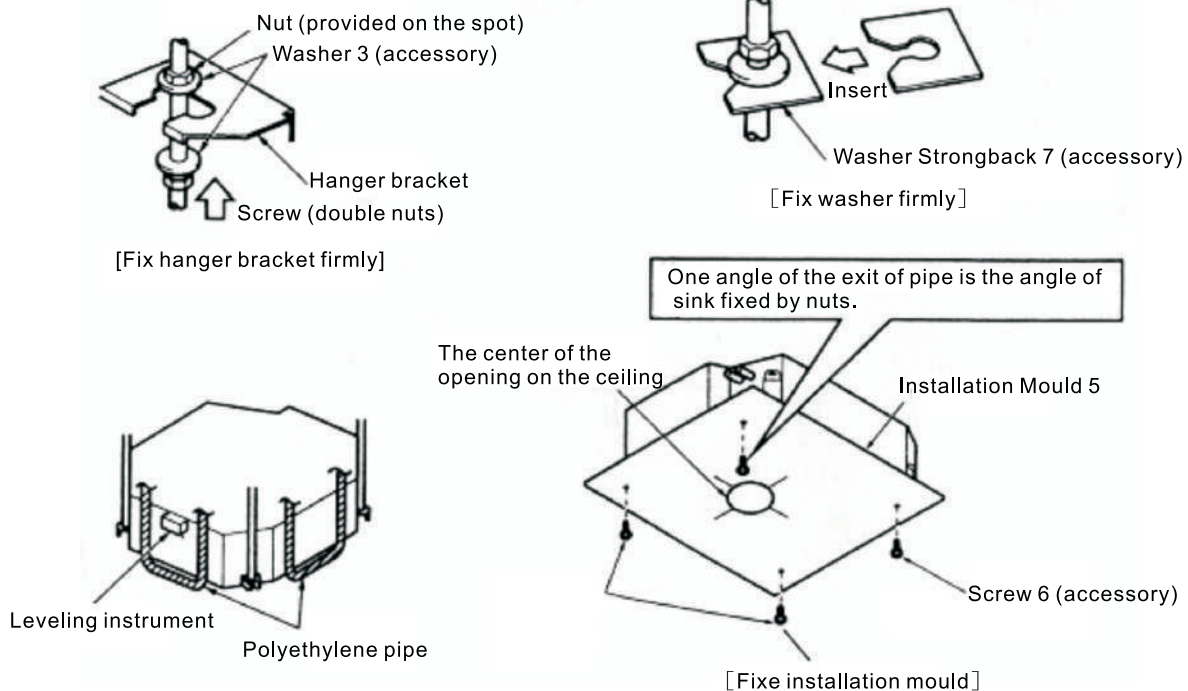

3. Installation of Indoor Unit

3-3 Installation of Panels

3-3-1 Preparation of Decorative Panels

Before installing decorative panels, please prepare in accordance with the following figures.

Arrangement of decorative panels

- 1) Don't turn decorative panels upside down. Don't lean against the wall or protuberant articles.
- 2) Avoid collision and squeezing of swing panels. (Otherwise it will cause fault.)

Take down the wind grill from decorative panels.

- 1) Press down the button of wind grill, and then lift one end of the button. (Refer to Figure 1)
- 2) Lift up the grill to about 45° and take off the wind grill on decorative panels. (Refer to Figure 2)

Take down the close cover of the angle. Extract the cover outward. (Refer to Figure 3)

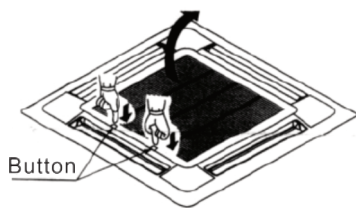


Figure 1

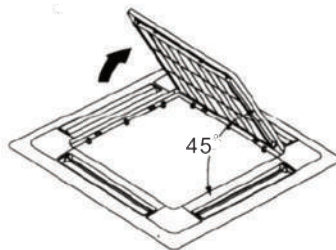


Figure 2

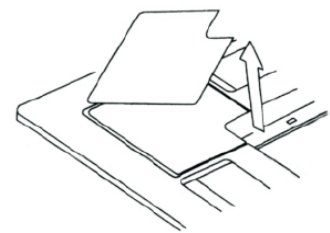


Figure 3

3-3-2 Install Decorative Panels on Indoor Unit

1) As shown in the figure, direct the electric motor of swing panel of decorative panels at the pipe of indoor to install the decorative panels on indoor unit.

2) Installation of decorative panels.

As for the installation orders of decorative panels, please refer to the following installation diagrams of decorative panels described in details.

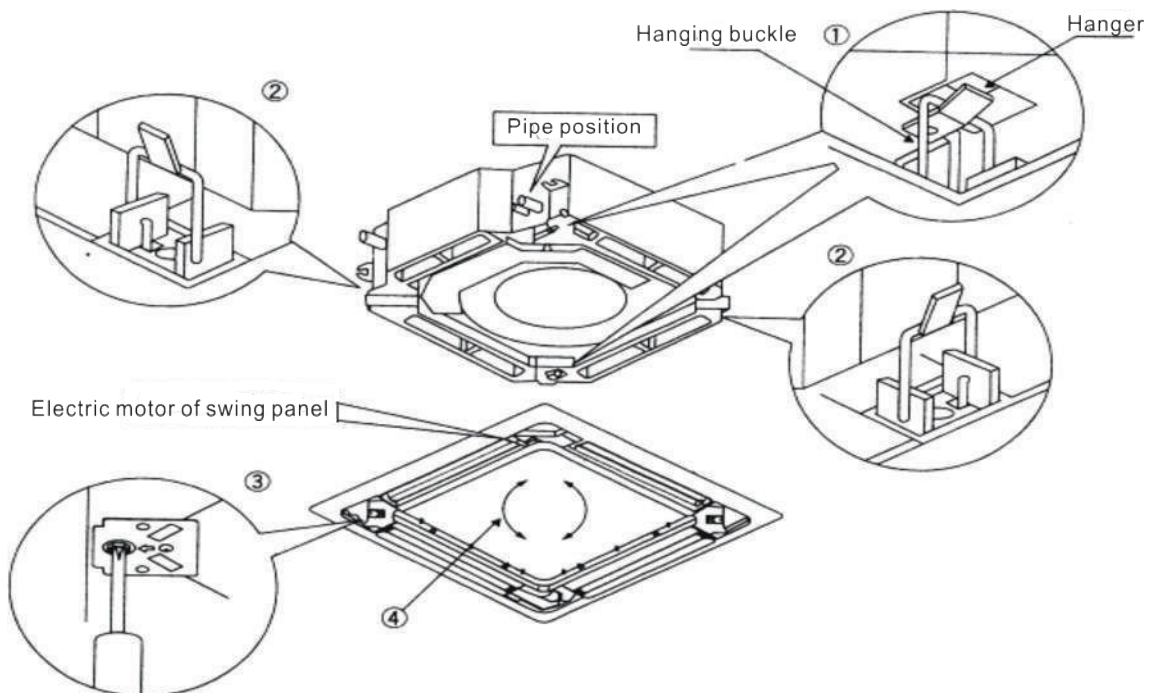


Diagram for Installation Orders of Ceiling-styled Panels

3. Installation of Indoor Unit

1) Temporarily install decorative panels on indoor unit. When installing, hang the hanging buckle of electric motor of swing panel of decorative panels on opposite position over the hanger of indoor unit. (Attention! Don't involve wire of the electric motor of swing panel into sealing material.)

2) Temporarily hang the remaining two hanging buckles over the hangers of indoor unit. (Attention: Don't involve wire of the electric motor of swing panel into sealing material.)

3) Screw 4 hexagon bolts under the hanging buckle in about 5 mm. (Panel will lift.)

4) As shown in the figure, turn decorative panels to the direction of the arrows for adjustment so as to totally cover the opening on the ceiling.

5) Screw bolts so that the thickness of packing material between decorative panels and indoor unit can be reduced to 5 mm to 8 mm as shown in the following figure.


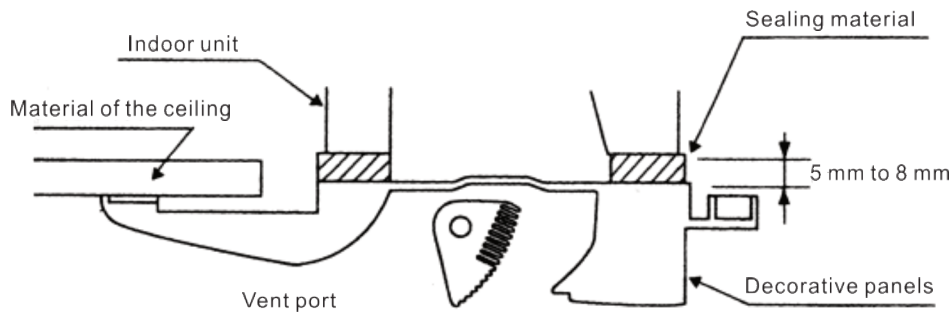


Diagram of Clearance between Ceiling-Style Panel and Real Indoor Unit


Notice

The cassette unit panels should be correctly installed and level. Otherwise it will cause a series of problems. See the following diagram:


If the bolts are not screwed properly, it will cause the faults as shown in the following figure. Screw the bolts again to meet the requirements.

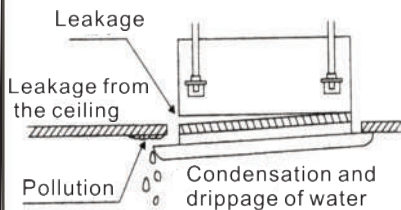

After screwing the bolts, if there is still gap between the ceiling and decorative panel, please readjust the height of indoor unit. There should be no gap.

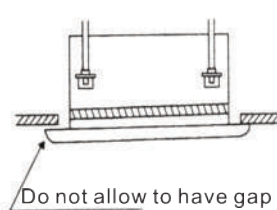

If indoor unit is level and drain-pipe does not drain, it will be fine to adjust the height of indoor unit through the holes of decorative panels.

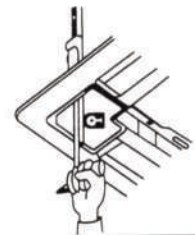

3. Installation of Indoor Unit

3-4 Hanging height of indoor unit

3-4-1 After the installation of indoor unit, please adjust hanging height of indoor unit. See the following figure.


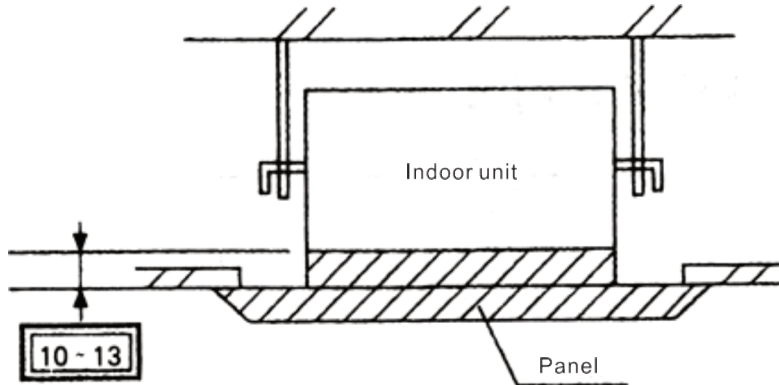


Diagram of Hanging height of the cassette unit

3-4-2 If there is gap between indoor unit and panel, the following unfavorable conditions may occur.

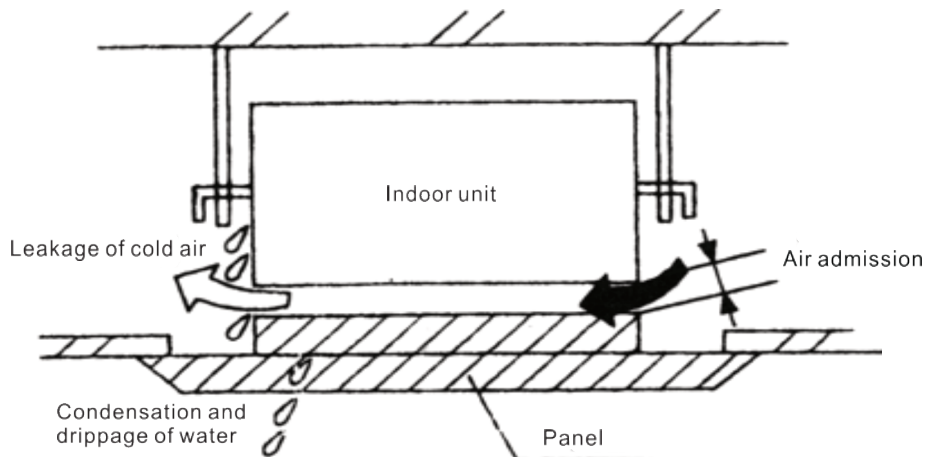

3. Installation of Indoor Unit

3-5 Wire Connection of Indoor Unit Body and Panel

- 3-5-1 Connect wire joints of electric motor of swing panel. (on decorative panels)
- 3-5-2 If joints are not connected, swing panel will not work. Be sure to properly connect joints.
- 3-5-3 Check if wire of electric motor of swing panel is placed between indoor unit and decorative panel.

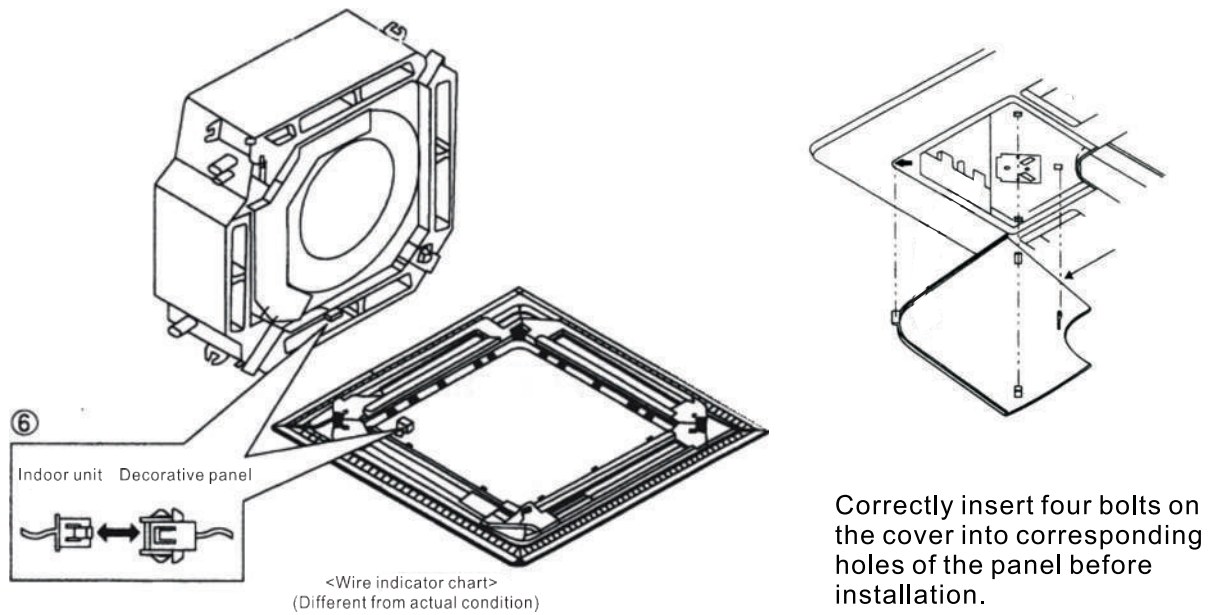


Diagram for Wire Connection of Indoor Unit Body and Panel


3-6 Installation of Wind Grill and Cover

<p>(1) Installation of wind grill</p> <p>Install according to reverse procedures of "Preparation of Decorative Panel". Turn around the wind grill and install in four directions. If it is necessary to adjust the installation direction of wind grill, or users propose such requirement, change its installation direction.</p>	<p>(2) Fix the cover on the angle As shown in the following figure, connect the string of cover with the bolt of the decorative panel.</p>	<p>Install the cover on the decorative panel. (refer to the following figure)</p>
<p>When installing the wind grill, be sure not to involve wire of electric motor of swing panel.</p>	<p>pin</p>	
		<p>Correctly insert four bolts on the cover into corresponding holes of the panel before installation.</p>

3. Installation of Indoor Unit

3-7 Installing Size of Indoor Unit


A 、 Appearance Size and Air Outlet Size of Cassette Unit (1) :

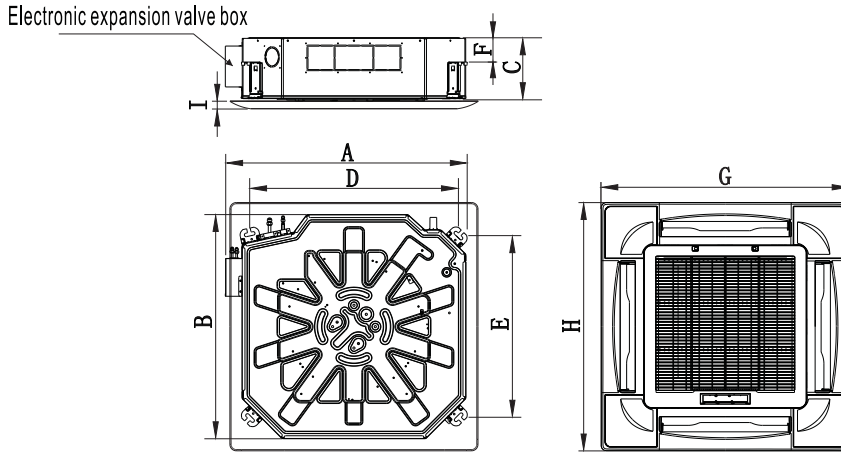

Unit: mm

Model of indoor unit \ Size code	Body size			Installing size			Panel size		
	A	B	C	D	E	F	G	H	I
5.6kW~8.0kW	900	833	232	776	684	91	950	950	50
9.0kW~16.0kW	900	833	286	776	684	150	950	950	50

B 、 Appearance Size and Air Outlet Size of Cassette Unit (2) :

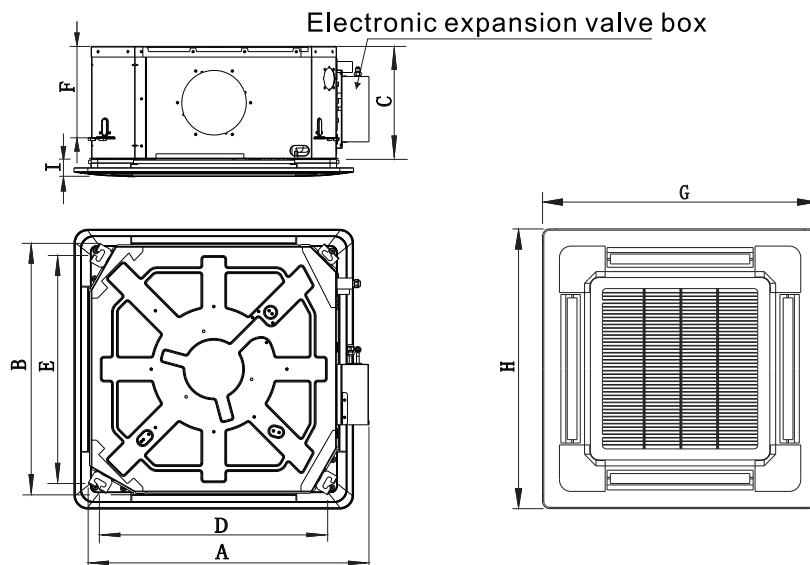


Unit: mm

Model of indoor unit \ Size code	Body size			Installing size			Panel size		
	A	B	C	D	E	F	G	H	I
2.2kW~4.5kW	653	585	267	528	528	212	650	650	30

3. Installation of Indoor Unit

C 、 Appearance Size and Air Outlet Size of Cassette Unit (3) :

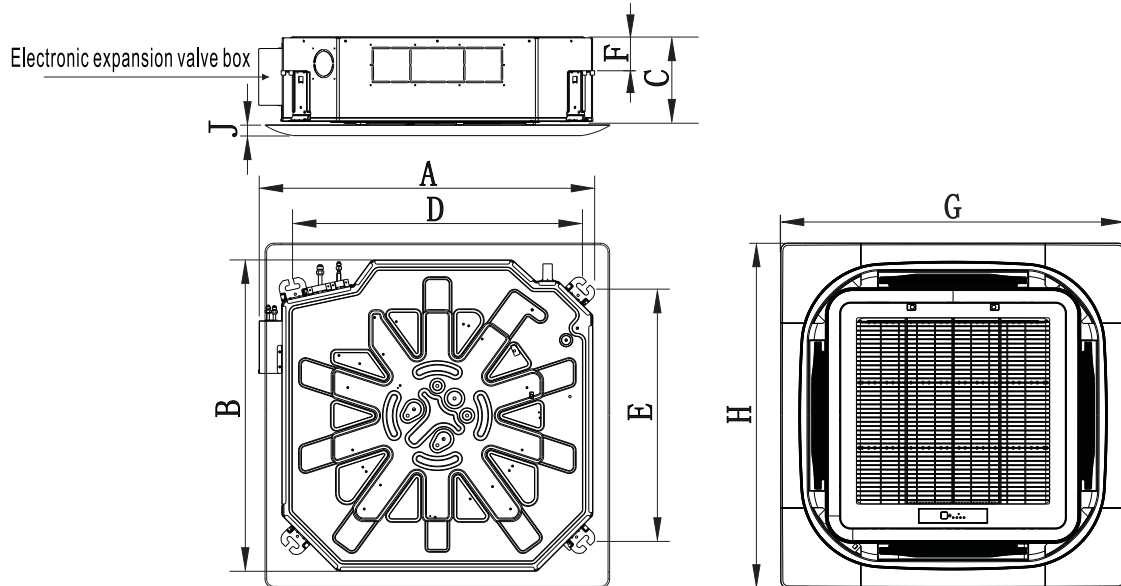

Unit: mm

Model of indoor unit \ Size code	Body size			Installing size			Panel size		
	A	B	C	D	E	F	G	H	I
5.6kW~8.0kW	900	833	232	776	684	91	950	950	80
9.0kW~16.0kW	900	833	286	776	684	150	950	950	80

4. Drain Pipe Layout

4-1 Installation of Drainpipe of Indoor Unit

1) PVC pipe (external diameter 30~32 mm, inner diameter 25 mm) can be used as drainpipe. Users can purchase drainpipe of appropriate length from distributor, local air conditioning service center or market according to actual installation.

2) Encase the mouth of drainpipe into the root of pumping pipe of main part and fasten together the drainpipe and insulating bushing with hoops (accessory).

⚠ Notice

Don't exert too much strength to avoid destruction of pumping pipe; insulating bushing of pumping pipe and drainpipe should be encased evenly in order to prevent water condensation.

3) Evenly bind up the pumping connecting pipe and drainpipe (especially indoor part) with insulation bushing, and tighten them with tightening belt to avoid air inflow and condensation.

4) In order to prevent water from flowing back into air conditioner when it stops, drainpipe should decline outside (water drain side) the room with an angle of 1/100 or above. Avoid expansion, water storage, etc., or abnormal noise will occur (see figure 4.1a).

5) When connecting drainpipe, don't pull it hard, in case the pumping connecting pipe gets loose and comes off. Set a supporting point in every 0.8 to 1.0 m, in case that drainpipe may flex. (See Figure 4.1b)

6) If it is necessary to arrange winding pipe, please use the connecting pipe part of water exit in electrical connector.

7) When connecting lengthened drainpipe, wrap the indoor part of it so as to prevent lengthened drainpipe from getting loose.

8) If the exit of drainpipe is higher than pumping connecting pipe of main body, drainpipe should be kept vertical upwards as it is possible. The connecting pipe part of water exit has the function of bending vertically and the drainpipe should be set within 600 mm from water tray. Otherwise, when it stops, too much water that flows back will cause overflow. (See Figure 4.2)

9) Set 1-2 exhaust pipe on the highest position of drainpipe so as to avoid the occurrence of gas sealing in drainpipe which may cause poor drainpipe.

⚠ Notice

Seal all connections of drainpipe system so as to prevent leakage.

10) The distance between the end of drainpipe and the bottom of sink must be more than 50 mm, and don't put drainpipe into water. When directly pouring condensed water into drainage ditch, use upward bent drainpipe into a U-shape water seal to prevent bad smell from entering room through drainpipe.

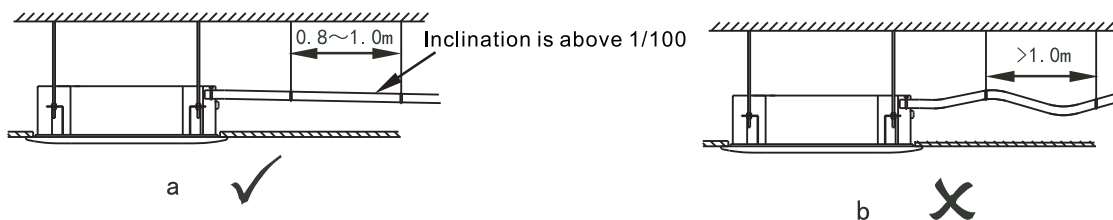


Figure 4.1

5. Install Connecting Pipes and Electronic Throttle

5-1 Requirements for the connecting length and drop height of the tubing of both indoor and outdoor units

- 1) Please refer to the allowed length of tubing in the instruction of outdoor unit.
- 2) Please refer to the allowed drop height of tubing in the instruction of outdoor unit.

⚠ Notice

- During the installation process, keep the air, dust and other impurities from getting into the pipeline system.
- Fix indoor and outdoor units before installing the connecting pipe.
- Keep dry while installing the connecting pipe and keep the water from getting into the pipeline system.
- Connecting pipe must be wrapped by heat insulator. (Usually, the thickness is more than 10 mm, and it is even thicker in closed humid area.)

5-2 Material and Size of Tubing

Table 5.1

Type	2.2kW~2.8kW	3.2kW~5.6kW	7.1kW~8.0kW	9.0kW~16.0kW
Liquid pipes (mm)	φ 6.35 × 0.8		φ 9.52 × 0.8	
Gas pipes (mm)	φ 9.52 × 0.8	φ 12.7 × 0.8	φ 15.88 × 1.0	

5-3 Procedures for Connecting Pipes

5-3-1 Measure the needed length of connecting tubing, and make connecting tubing according to the flowing methods. (For details, see the "Tubing Connection" column)

- 1) Connect the indoor unit before connecting the outdoor unit.

a. Pay attention to the configuration of winding tubing so as not to damage the tubing and its insulation layer.

b. Smear the refrigerator oil (it must be engine oil which is compatible with the cooling medium of this type) on the outside surface of flared joint and the conical surface of connecting nut and screw it 3 or 4 rounds with your hand (Fig. 5.1) before screwing the flared nut up.

c. Use two spanners at the same time when connecting or taking the tubing down.

d. The interface of indoor unit can't bear all the weight of the connecting tubing, because if the interface is over-burdened, it will affect the cooling or heating effects of indoor unit.

2) The stop valve of outdoor unit should be completely shut down (as the default state when leaving the factory). Unscrew the nut from the stop valve and connect the flared tube at once (within 5 minutes).

3) After connecting the refrigerant tubing to both indoor and outdoor units, eliminate the air according to the column of "Vacuum Supply", then screw the nut up.

a. Notes for flexible coupling:

① The winding angle should be less than 90° (Fig. 5.2).

② Its sinuosity had better be in the centre of the pipe range, its bending radius should be more than 3.5 D (the diameter of pipeline).

③ Don't bend the flexible coupling pipe for more than 3 times.

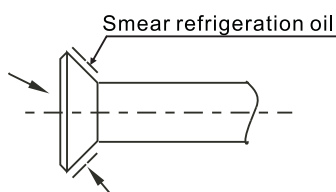


Figure 5.1

Bend pipe with thumbs



Figure 5.2

5. Install Connecting Pipes and Electronic Throttle

b. Bending thin-wall connecting pipe (Fig. 5.3).


① Cut away a notch of a required size in the insulated tubing at the place of sinuosity when operating with the sinuosity, then expose the pipeline (wrap it up with binder after it gets bent).

② Bend radius as much as possible so as to avoid squash or destruction.

③ Use pipe bender to make close sinuosity.

c. Use copper pipe sold in the market:

When using the copper pipe purchased in the market, you must use the same type insulating material (thickness is often more than 10 mm, and it is even thicker in closed humid area.).

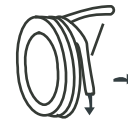

Remove coil methods make pipe end straight

Figure 5.3

5-3-2 Pipe Arrangement

1) It is necessary to bend pipe or drill holes on the wall. The section surface of bending pipe should not exceed 1/3 of original section surface. When drilling wall or board, ensure to set protection bushings. Welding lines are not allowed to be made within the protection bushings. When drilling external wall for the pipe, ensure to seal it tightly with binder so as to prevent impurities from entering the pipe. The pipe should be insulated by appropriate and suitable insulating tube.

2) The encased connecting pipe should get through the hole on the wall from outside and enter into the room. Arrange pipes carefully. Don't destroy pipes.

5-4 Connection of Pipe

5-4-1 Flaring

1) Cut off pipe with a pipe cutting knife (See Figure 5.4).

2) Insert the pipe into the connected flared nut (Table 5.2).

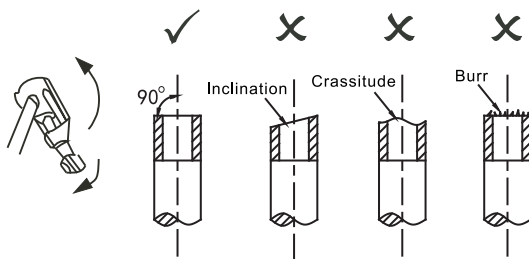


Figure 5.4

Table 5.2

External diameter (mm)	A (mm)	
	Maximum	Minimum
φ 6.35	8.7	8.3
φ 9.52	12.4	12.0
φ 12.7	15.8	15.4
φ 15.88	19.0	18.6
φ 19.05	23.3	22.9

5-4-2 Fasten Nuts

Aim at the connecting pipe and screw up nuts with hand and then screw them up with wrenches as shown in Figure 5.5.

Notice

In accordance with installation conditions, too large torque will break loudspeaker while too small torque will cause leakage of air. Please ensure that the torque has been screwed up according to Table 5.3.

Table: 5.3

pipes size (mm)	Tightening torque (N.m)
φ 6.35	10 ~ 12
φ 9.52	15 ~ 18
φ 12.7	20 ~ 23
φ 15.88	28 ~ 32
φ 19.05	35 ~ 40

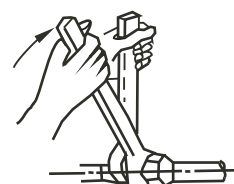


Figure 5.5

5. Install Connecting Pipes and Electronic Throttle

5-5 Installation of Electronic Throttle Component and Connecting Pipe Assembly

5-5-1 Schematic Diagram for Installation of Electronic Throttle Component

Electronic throttle parts have been installed on unit body when leaving the factory. Please refer to Figure 5.6. When installing the entire unit, please joint connecting nuts of electronic throttle parts with liquid pipe of evaporator and screw it up with torque wrench.

5-5-2 Maintenance diagram of electronic throttle parts

Electronic throttle parts have been installed on unit body when leaving the factory. They are connected by four nuts. Refer to Figure 5.6. Please carry out maintenance of electronic throttle parts in accordance with the following steps:

- 1) Collect as much refrigerant air back to outdoor unit as possible.
- 2) Open maintenance opening.
- 3) Open electronic throttle parts, connecting pipe and connecting nuts of the unit.
- 4) Remove set screws of electronic throttle parts and the unit with cross screwdriver.
- 5) Remove the whole electronic throttle parts from the machine, unscrew fixed screws and remove the cover.
- 6) Check and repair electronic throttle parts, etc.

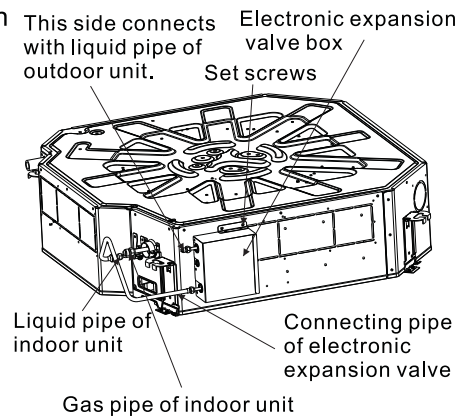


Figure 5.6

5-6 Leakage Test

After having installed refrigerant pipe, connect it before outdoor unit. Inject nitrogen with certain pressure (4.0MPa) from gas pipe side and liquid pipe side at the same time to take leakage test for 24 hours.

5-7 Vacuum Supply

Connect refrigerant pipe with the two sides of gas pipe and liquid pipe of outdoor, use vacuum pump to vacuumize from the two sides of gas pipe and liquid pipe of outdoor at the same time.

▲ Notice

Never use refrigerant sealed in outdoor unit to vacuumize.

5-8 Valve Switch

Use 5 mm hex socket to open and close the valve of outdoor unit.

5-9 Leak Detection

When detecting leakage, detect leak in the valves at the interface of the pipe joints with soap bubbles.

5-10 Insulated Treatment

Insulate gas pipe side and liquid pipe side. When refrigerating, the temperature of gas pipe side and liquid pipe side should be low. To prevent condensation, please fully insulate (See Figure 5.7).

- 1) Gas pipe must be made from insulated material which can resist more than 120°C.
- 2) Please seamlessly insulate the connecting parts of indoor unit single joints with accessorial insulating tube.

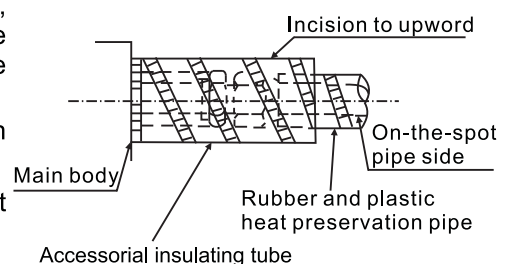


Figure 5.7

6. Connection of Electricity

6-1 Electric Wiring

⚠ Notice

- Air conditioning applies special power supply and power supply voltage should conform to the rated voltage.
- The external power supply circuit of air conditioning must have ground wire. Power supply's ground wire of indoor unit should be connected accurately with external circuit.
- Wiring should be installed by professional technicians according to labeling of circuit diagram.
- The connected fixed circuit must be furnished with an all-pole disconnection equipment with at least 3mm trigger distance.
- Install protective equipment of creepage in accordance with standard of national electrical equipment technology.
- Power and signal lines should be appropriately arranged in good order, and can not interfere with each other.
- Meanwhile, they cannot connect with connecting pipes and valve body. At the same time, two wires cannot be connected, unless they are welded firmly and wrapped with insulating tapes.
- After installation has done, before connecting to power supply, please check carefully and make sure everything is fine.

6-2 Specification of Power Supply

The specification of power supply wires recommends the following Figure 6.1. Wirings may be overheated and the machine will break down if the capacity is too small.

Table 6.1

Project Mode	Power supply of indoor part				Connecting wire		Ground wire	
	Power supply	Power switch		Power Cord		Signal wire of indoor and outdoor units		
		Capacity	Fuse	Below 20 m	Below 50 m	Number		Wire diameter
2.2~16.0kW	Single-phase	15A	15A	2.5mm ² ×2	4mm ² ×2	1	Two-core shielded cable 0.75mm ²	Single wire 2.5mm ²

⚠ Warning

As you review this manual, along with the wiring instructions presented in this section, keep in mind that: all field-installed wiring must conform to National Electric Code (NEC) guidelines, and any applicable state and local codes. Be sure to satisfy proper equipment grounding requirements per NEC.

6-3 Wiring Suggestion of Signal Wire of Indoor Unit

1) Shielded wire should be used as signal wire. Using other wires may cause signal interference and malfunction.

2) Wiring shielding layers of shielded wire into one line and then connect it to port E of terminal. (See Figure 6.1)

3) It is forbidden to tie the signal wire with refrigerant pipe, power supply wires etc. When power supply wires are paved in parallel with signal wire, they should keep a distance of more than 300mm to avoid interference of signal source.

4) Signal wire cannot form a closed circuit.

5) Signal wire contains polarity, so be careful when connecting wires. Signal wire of indoor unit should be connected to ports labeled "P, Q, E". And they should conform to ports labeled "P, Q, E" of the main machine of outdoor unit and cannot be connected wrongly.

6. Connection of Electricity

6) Please use two-core twisted shielded pair cable (not less than 0.75mm^2) as signal wire of indoor and outdoor units. Because it contains polarity, it should be connected properly. Signal wires of indoor and outdoor units can only be led out from the main machine of outdoor unit and connected to all indoor units of a same system.


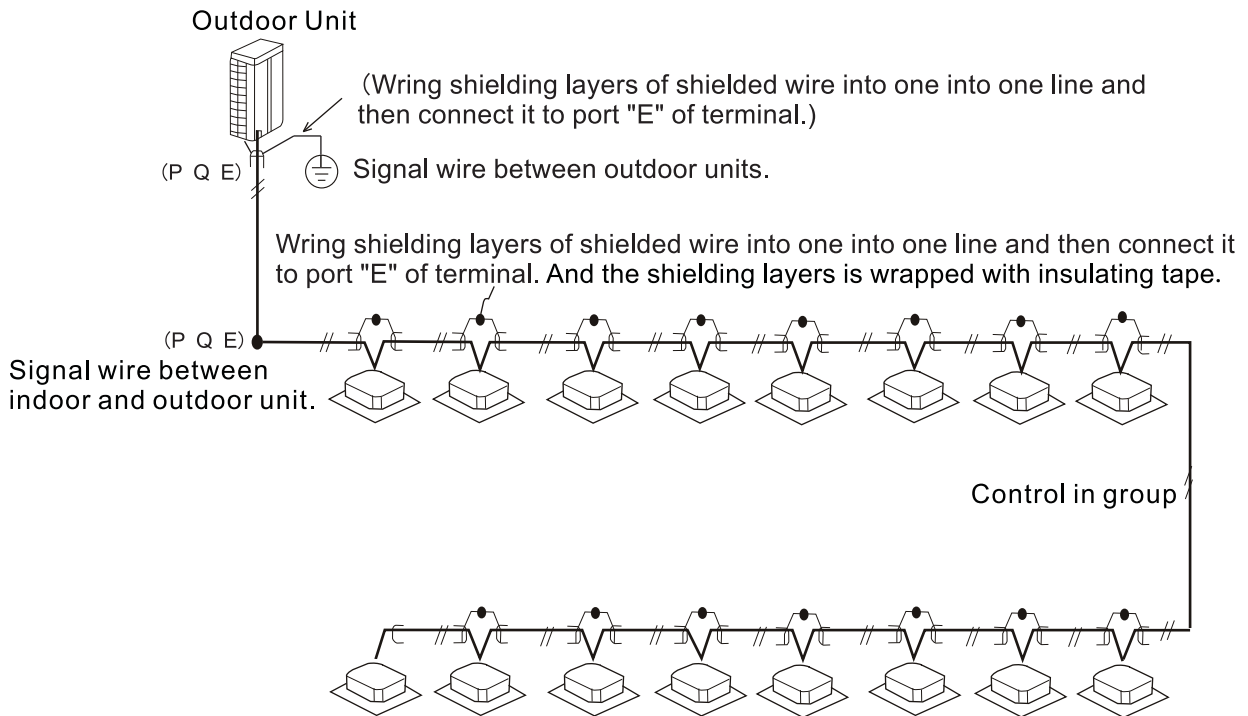



Figure 6.1

6-4 Wiring Suggestion of Power Supply of Indoor Unit

- 1) The indoor unit power supply in the same system must be in the same circuit and switched on or off at the same time, or the system service life may be shortened and the machine may fail in starting up.
- 2) Power supply, current leakage protector and manual switch connected to the same outdoor unit must be with the versatility.
- 3) Power supply wires should be connected to the terminal labeled "L, N", ground wire of power supply should be connected to electricity control box "⊕".

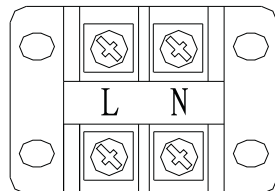

Single-phase power

 

Ground

6-5 Handling of Wiring Interface

Wiring interface should be sealed with insulated material. Failure to seal will cause condensation.

A-GZM14Eng-2
802000190203